

Blue

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 1

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals:

Process Plan:

PL

Date: 09-10-30

Tooling:

Date:

Run Start



QC:

Date:

SPC (Y/N):

Date:

Stop



Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Draw
Number

Draw
Rev.

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

Draw Nbr

Revision Nbr

D2650

Rev F

100

0.00



DOCUMENT CONTROL

DC

0.00

Memo

N/A *AS*

Document Control

Photocopy bluefile and create labels per PPP D206-642-441 CHG002

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 2

Item ID: D206-642-441
Revision ID: F
Item Name: Replacement Skidtube

Accept



Setup Start



Stop



Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
110		0.00							
	Skidtubes								
Skidtubes	Memo	0.00							
Skidtubes	1-Deburr Fwd edge of tube								
	2-Remove ridge on inside of Fwd edge of tubeas per Dwg D2650								
	3-Weld Fwd Cap as per Dwg D2650. Use aluminum rod. Grind D2647 to fit as required. A/R <input type="checkbox"/> Aluminum Rod <u>M112507</u> / <u>M111999</u> BE 9-11-3								
	4-Grind weld flush to cap on top surface only. BE 9-11-3								
	5-Cut aft end 138.60" from front of tube								
	6-Drill pilot holes using drill jig DT8025 & DT8169 (A,B,C,D). Open to Ø0.312".								
	7-Drill holes for wearplates using DT 8028-7. Open to Ø 0.297".								
	8-Open using #6 Drill Bit								
	9-Open holes for Tow Ring to Ø0.625" as per Dwg D2650, D2650-7 Drilling Detail								
	10-Remove inner indexing ridge on aft end of skidtubeas per Dwg D2650								
	11-Deburr and Blow out all chips form inside the tube								

BE 9-11-3

BE 9-11-3

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 3

Item ID: D206-642-441
Revision ID: F
Item Name: Replacement Skidtube

Accept



Setup Start



Stop



Start Date: 29/10/2009 Start Qty: 1.00
Required Date: 09/11/2009 Req'd Qty: 1.00



Cust Item ID:
Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____
QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
120		0.00							
		0.00				(40)	f		
Skidtubes									
Skidtubes	QC5								
	Memo								
	Install D2080-041 Nut plate as per Dwg								
130		0.00							
		0.00				(40)	f		
QC									
Quality Control									
	QC10- Inspect visual per QSI004- ground welds								
	Memo								

11/09/11/03 - Chemical conversion
- QC 3

9-11-3

1 11 9/11/3

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 4

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

140

0.00



Skidtubes

Skidtubes

Memo

0.00

1-Open holes to finished size as per Dwg D2650, D2650-7 Drilling Detail
(without cutting fluid)

2-Countersink crossbolt spacer holes as per Dwg D2650(without cutting fluid)

3-Deburr. Blow out chips. Grind alodine off around crossbolt spacer.

4-Bond D2654-7 web in place as per QSI 015Ensure holes line upAllow 12 Hrs.
cure time before cutting

Start Date: 9/31/3 Time: 4:05

Finish Date: 9/4/4 Time: 8:36 am

A/R ☐ Sikaflex-291 ☐

Sikaflex expiry date: 10-02-20 11/2391

1 - - Rm 9413

150

QC5- Inspect part completeness to step on W/O

0.00



QC

Memo

0.00

Quality Control

25 ozulolay

(42) 4

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 5

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
160		0.00							
	Skidtubes								
Skidtubes	Memo	0.00							
Skidtubes	1-Prep per QSI 005 and Insert cross bolt spacers D2649. Weld as per QSI 004 and Dwg D2650. Remember to back drill each hole to 0.25" before welding the other side. Use aluminum rod. A/R <input type="checkbox"/> Aluminum Rod <input checked="" type="checkbox"/> <i>M112507</i> <i>AE 09/11/05</i>								
	2-Grind welds flush as per Dwg D2650.								
	3-Counterbore 5/16" x 0.750" deep as per Dwg D2650Deburr								
165	QC5- Inspect part completeness to step on W/O	0.00							
QC	Memo	0.00							
Quality Control									

1 M 9/11/05

(10)

2) Skidtubes

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 6

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
170 HandFinish	HandFinishing	0.00				1	11/11/5		
Hand Finishing	Memo Install D2680-041 Nut Plate as per Dwg D2650	0.00							
180 QC	QC10- Inspect visual per QSI004- ground welds	0.00							
Quality Control	Memo	0.00							
190 QC	QC5- Inspect part completeness to step on W/O	0.00							
Quality Control	Memo	0.00							

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 8

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00



Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

Run Start



QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Stop



Sequence ID/
Work Center ID

Operation
Description

Set Up/
Run Hours

Draw
Number

Draw
Rev.

Plan
Code

Accept
Qty

Reject
Qty

Reject
Number

Insp.
Stamp

230

0.00



HandFinishing

HandFinish

Memo

0.00

Hand Finishing

1-Install inserts & wearpads as per dwg D2922. Use a drop of Sikaflex inside insert holes before installing wearpad/wearplate.

A/R ☐ Sikaflex-291 ☒ M/12391

Sikaflex expiry date: ☐ 10/01

2-Install O-Rings D2651-3 on plugs D2651-1 with Petroleum Jelly and install plugs as per Dwg D2650. Clean excess adhesive

3-Install MS27039-4-06 Screw as per DEO 9153

4-Inspect for foreign object per QSI 024

5-Install D2646 Aft Cap and seal with SikaflexClean excess adhesive

A/R ☐ Sikaflex-291 ☒ M/12391

Sikaflex expiry date: ☐ 10/01

6-Wing Walk as per Dwg D2650-7 and QSI 005 4.4

Batch M/12203

Handwritten: 09-11-12 (1)

Work Order ID 53292

October 30, 2009 1:15:55 PM



Page 9

Item ID: D206-642-441

Accept



Setup Start



Revision ID: F

Stop



Item Name: Replacement Skidtube

Start Date: 29/10/2009 Start Qty: 1.00



Cust Item ID:

Required Date: 09/11/2009 Req'd Qty: 1.00

Customer:

Reference:

Approvals: Process Plan: _____ Date: _____ Tooling: _____ Date: _____

QC: _____ Date: _____ SPC (Y/N): _____ Date: _____

Run Start



Stop



Sequence ID/ Work Center ID	Operation Description	Set Up/ Run Hours	Draw Number	Draw Rev.	Plan Code	Accept Qty	Reject Qty	Reject Number	Insp. Stamp
--------------------------------	--------------------------	----------------------	----------------	--------------	--------------	---------------	---------------	------------------	----------------

240

QC5- Inspect part completeness to step on W/O

0.00

⇒ S 09/11/17



QC

Memo

0.00

(X)

Quality Control

250

Packaging

0.00

PP 353200



Packaging

Memo

0.00

9/11/18 RSL

Packaging

Identify and pack for shipping as per PPP D206-642-441

Location: _____

PPP Rev: _____

260

QC21- Final Inspection - Work Order Release

0.00



QC

Memo

0.00

09/11/19 HJ

Quality Control

U 09/11/18

Picklist Print

October 30, 2009 1:16:00 PM

Page 1

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2620RevB		Manufactured	No			110	Each	13.0000	1.0000			
Skidtube, 206 Skidtube												

9-11-3

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

13

45898

13

D2646RevC

Manufactured No



Aft Cap

120

Each

44.0000

1.0000



1

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

44

20208

0

43801 ✓

1

46327

4

48109

39

D2647RevF

Manufactured No



Cap

140

Each

23.0000

1.0000



Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

23

10773

7

43846

16

BR 09-11-12.

BE 2-11-3

Picklist Print

Page 2

October 30, 2009 1:16:00 PM

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	--------------------------	---------------	----------------	--------

D2654-7RevE1

Manufactured

No

160

Each

2.0000

1.0000



Web

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

FG

2

52801

2

CCR264SS3-3

Purchased

No

170

Each

65.0000

2.0000



Cherry Rivet

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

65

111548

38

111827

1

112314

26

B-52917 ^{AUM} 9-11-03

2 11/9/15

Picklist Print

October 30, 2009 1:16:00 PM

Page 3

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2649RevB1		Manufactured	No			170	Each	476.0000	23.0000			
Cross Bolt Spacer												

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

LG

83

51529

83

Main Warehouse

ST

393

36013

5

47112

382

48271

6

23 86 09/11/05

D2680-041RevB1

Manufactured

No

170

Each

75.0000

1.0000



Nut Plate

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

75

33061

10

44086

65

1 11 9/11/05

Picklist Print

October 30, 2009 1:16:00 PM

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
---------------------------------	------------------------	---------------	-------------	---------------------	------------------	-----------------	--------------------	----------------	--------------------------	---------------	----------------	--------

ALS4-1032-130

Purchased

No

230

Each

5,073.000

60.0000



Insert

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

5073

110511 /

5073

AN9603BTOL

Purchased

No

230

Each

5,735.000

62.0000



Washer

Warehouse

Loc Qty

Loc Code

Location

Main Warehouse

ST

5735

101291

16

104885

153

105793 /

236

109632 /

420

110985

4910

60 BR 09-11-12

RO

2 ~~62~~ BR 09-11-12

W/O: 53292		WORK ORDER CHANGES					
DATE	STEP	PROCEDURE CHANGE	By	Date	Qty	Approval Chief Eng / Prod Mgr	Approval QC Inspector
09.11.12	230	Qty (60) AN960 JD10L REPLACED WITH Qty (60) AN960 CIDL 112612	BR 09-11-12		60	CP 09.11.12 051642	S 02/11/12

Part No: D206642-441 PAR #: _____ Fault Category: _____ NCR: Yes No DQA: _____ Date: _____

Resolution: _____ Disposition: _____ QA: N/C Closed: _____ Date: _____

NCR:		WORK ORDER NON-CONFORMANCE (NCR)						
DATE	STEP	Description of NC Section A	Corrective Action Section B			Verification Section C	Approval Chief Eng	Approval QC Inspector
			Initial Chief Eng	Action Description Chief Eng	Sign & Date			

NOTE: Date & initial all entries

Picklist Print

October 30, 2009 1:16:00 PM

Work Order ID: 53292

Parent Item: D206-642-441RevF

Parent Item Name: Replacement Skidtube


Comments:

Start Date: 29/10/2009

Required Date: 09/11/2009

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
AN960JD416 		Purchased	No			230	Each	4,591.000	1.0000			
Washer												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	4591	
108161	519	
110523	340	
111279	101	
111916	482	
112314 ✓	3149	
16941	0	

1 BL 09-11-12

CR3212-4-03

Purchased

No

230

Each

292.0000 2.0000



Cherry Rivet

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	292	
111359 ✓	92	
112314 ✓	200	

2 11/11/15

Picklist Print

Page 6

October 30, 2009 1:16:00 PM

Work Order ID: 53292

Parent Item: D206-642-441RevF

Parent Item Name: Replacement Skidtube



Comments:

Start Date: 29/10/2009

Required Date: 09/11/2009

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D2651-1RevB		Manufactured	No			230	Each	359.0000	22.0000			
												
Plug												

Warehouse Loc Qty Loc Code

Location

Main Warehouse

ST

359

43990

81

45490 ✓

28

51530

250

22 pl 09-11-12

D2651-3RevB

Manufactured No



O-Ring

230

Each

991.0000

22.0000



Warehouse Loc Qty Loc Code

Location

Main Warehouse

ST

991

43849

3

46114 ✓

988

22 pl 09-11-12

October 30, 2009 1:16:00 PM

Shop Packet Print

Page 6

Picklist Print

October 30, 2009 1:16:00 PM

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3535-15RevB		Manufactured	No			230	Each	22.0000	1.0000			

Wearshoe

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	17	
51671 ✓	17	
Main Warehouse		
ST	5	
30750	4	
42233	1	

1 BL 09-11-12

D3535-23RevB

Manufactured No



230 Each 15.0000 1.0000



Wearshoe

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	13	
51618 ✓	13	
Main Warehouse		
ST	2	
48156	2	

1 BL 09-11-12

Picklist Print

Page 8

October 30, 2009 1:16:00 PM

Work Order ID: 53292

Parent Item: D206-642-441RevF

Parent Item Name: Replacement Skidtube



Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3535-37RevB		Manufactured	No			230	Each	18.0000	1.0000			
												
Wearshoe												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		

Main Warehouse

FP 13

51654 13

Main Warehouse

ST 5

47374 ✓ 5

D3536-15RevA

Manufactured No

230

Each

32.0000

1.0000



Gasket

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		

Main Warehouse

ST 32

48159 6

51600 ✓ 26

1 PK 09-11-12

1 PK 09-11-12

October 30, 2009 1:16:00 PM

Shop Packet Print

Page 8

Picklist Print

Page 9

October 30, 2009 1:16:00 PM

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3536-23RevA		Manufactured	No			230	Each	21.0000	1.0000			
Gasket												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	12	
51609	12	
Main Warehouse		
ST	9	
30754	1	
47713 ✓	8	

1 10-11-12

D3536-37RevA		Manufactured	No			230	Each	20.0000	1.0000			
Gasket												

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	20	
47375 ✓	7	
51641	13	

1 10-11-12

Picklist Print

October 30, 2009 1:16:00 PM

Work Order ID: 53292

Parent Item: D206-642-441RevF

Parent Item Name: Replacement Skidtube

Comments:

Start Date: 29/10/2009

Required Date: 09/11/2009

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
D3537-1RevC		Manufactured	No			230	Each	299.0000	6.0000			

Wearpad

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
FP	2	
48288	2	
Main Warehouse		
FP17	297	
51624	30	
51678 ✓	162	
51679	105	

6 BR 09-11-12.

D3537-3RevC

Manufactured No

230

Each

60.0000

1.0000



Wearpad

<u>Warehouse</u>	<u>Loc Qty</u>	<u>Loc Code</u>
<u>Location</u>		
Main Warehouse		
ST	60	
30758	7	
33881 ✓	17	
35697	36	

1 BR 09-11-12

Picklist Print

Page 11

October 30, 2009 1:16:00 PM

Work Order ID: 53292



Parent Item: D206-642-441RevF



Parent Item Name: Replacement Skidtube

Start Date: 29/10/2009

Required Date: 09/11/2009

Comments:

Start Qty: 1.00

Required Qty: 1.00

Component Item ID/ Item Name	Replacement Item ID	Mfg/ Purch	Bin Item	Primary Location	Last Location	Route Seq ID	Unit of Measure	Qty on Hand	Remaining Qty To Pick	Qty Issued	Date Issued	Status
MS27039-1-08		Purchased	No			230	Each	2,947.000	2.0000			
Screw												

WarehouseLoc QtyLoc CodeLocation

Main Warehouse

ST

2947

110467✓

188

110552

759

110835

2000

2 *OK* 09-11-12

MS27039-4-06

Purchased

No

230

Each

75.0000

1.0000



Screw

WarehouseLoc QtyLoc CodeLocation

Main Warehouse

ST

75

109061✓

75

1 *OK* 09-11-12

MS27039C1-08

Purchased

No

230

Each

962.0000

60.0000



SCREW

WarehouseLoc QtyLoc CodeLocation

Main Warehouse

ST

962

19185✓

962

60 *OK* 09-11-12

October 30, 2009 1:16:00 PM

Shop Packet Print

Page 11

QTY -1	QTY -3	QTY -5	QTY -7	PART NUMBER	DESCRIPTION
X				D2650-1	SKIDTUBE ASSEMBLY
	X			D2650-3	SKIDTUBE ASSEMBLY
		X		D2650-5	SKIDTUBE ASSEMBLY
			X	D2650-7	SKIDTUBE ASSEMBLY
1	1	1	1	D2600-1-160	EXTRUSION
1				D2654-1	WEB
	1			D2654-3	WEB
		1		D2654-5	WEB
			1	D2654-7	WEB
1	1	1	1	D2646	AFT CAP
1	1	1	1	D2647	CAP
17	18	19	23	D2649	CROSS BOLT SPACER
16	18	14	22	D2651-1	PLUG
16	18	14	22	D2651-3	O-RING
1	1	1	1	D2680-041	NUT PLATE
2	2			D3286-1	DOUBLER
2	2			D3286-3	STUD
42	44	54	60	ALS7-1032-130	INSERT (or AKS4-1032-130, ALS4-1032-130, ALS7-1032-130)
2	2	2	2	AN960JD10L	WASHER
2	2	2	2	CCR264SS3-3	RIVET
2	2	2	2	CR3212-4-03	RIVET
2	2	2	2	MS27039-1-08	SCREW
1	1	1	1	MS27039-4-06	SCREW
1	1	1	1	AN960JD416	WASHER
52	52			CR3212-4-04	RIVET

F

F

NOTES:

MATERIAL: N/A

FINISH: -CHEMICAL CONVERSION COAT PER DART QSI 005 4.1

-POWDER COAT WHITE (4.3.5.1) PER DART QSI 005 4.3

-BLACK ANTI-SKID PAINT AS INDICATED TO 0.5 ABOVE LOCATION RIDGE PER

DART QSI 005 4.4

TOLERANCES: PER DART QSI 018 UNLESS OTHERWISE NOTED

UNITS: INCHES UNLESS OTHERWISE NOTED

BREAK SHARP EDGES: 0.005 TO 0.010 MAX

IDENTIFICATION: NONE

WEIGHT: N/A

WELD PER DART QSI 004

DAMAGE TOLERANCE ON FWD BEND:

THERE SHOULD BE NO VISIBLE WRINKLES IN THE BEND FROM THE GROUND TO A HEIGHT OF 5 INCHES ABOVE THE GROUND. IT IS ACCEPTABLE TO POLISH OUT GOUGES UP TO 0.020 DEEP IN THE BENT PORTION OF THE TUBE. A MAXIMUM REDUCTION IN DIAMETER OF 0.150" IS ACCEPTABLE IN THE BENT PORTION OF THE TUBE.

) BOND WEB INTO OUTER TUBE WITH SIKAFLEX-241/-291 ADHESIVE PER DART QSI 015

) INSERT D2651-1 PLUG C/W D2651-3 O-RING IN HOLES MARKED 'P' (BOTH SIDES OF TUBE)

) DRILL Ø0.297 FOR ALS7-1032-130 INSERTS USING TEMPLATE DT8056-1 ON -1 TUBE, DT8056-3 ON -3 TUBE, DT8056-5 ON -5 TUBE, AND DT8056-7 ON -7 TUBE. INSTALL INSERTS AFTER FINISH.



) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED


SHOP
RETURNED
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE

WORK CENTER
NO. 53292


RELEASED
08-07-23

F	DRAWING UPDATED TO CURRENT STANDARDS. SHT 6 ADDED. ALL SECTION AND DETAIL VIEWS TRANSFERRED TO SHT 6. SHT 1 IN PL PART D2649 QTY UPDATED. SHT 6 SECT C-C GRIND INSTRUCTIONS DELETED FROM NOTE 7 (SEE NCR 239).	AJS	08.08.08
E	RMOVE CBORE, CHG DRILL, ADD CHAMFER	CP	06.03.30
D	REDRAW; INCCRP, DE09136/9153/9163 MOD GROUND HANDLING ON D2650-1/-3	CP	04.05.17
C	CHANGE HOLE PATTERN AND FRONT END	DS	97.10.29
B	AS MANUFACTURED CHANGES	DS	97.06.26
A	NEW ISSUE	DS	97.03.25
REV.	DESCRIPTION	BY	DATE
DESIGN	DS	DART AEROSPACE USA, INC PORT HADLOCK, WA	
DRAWN	AJS		
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 1 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

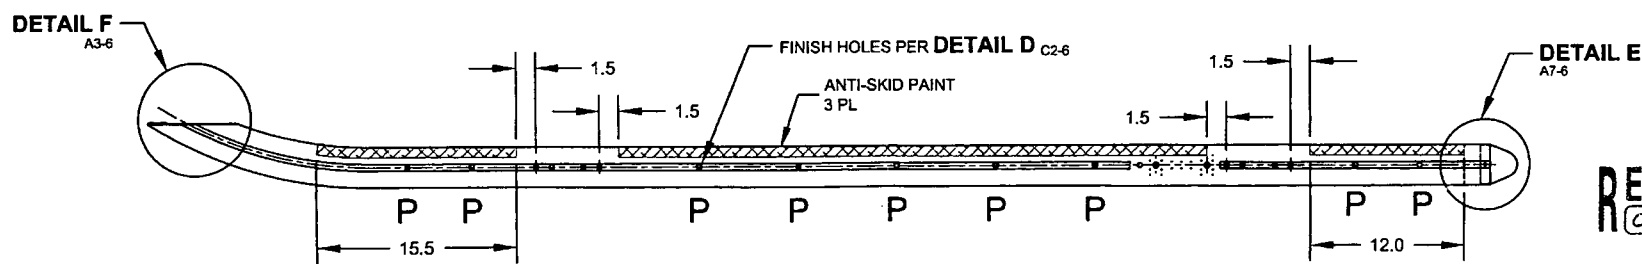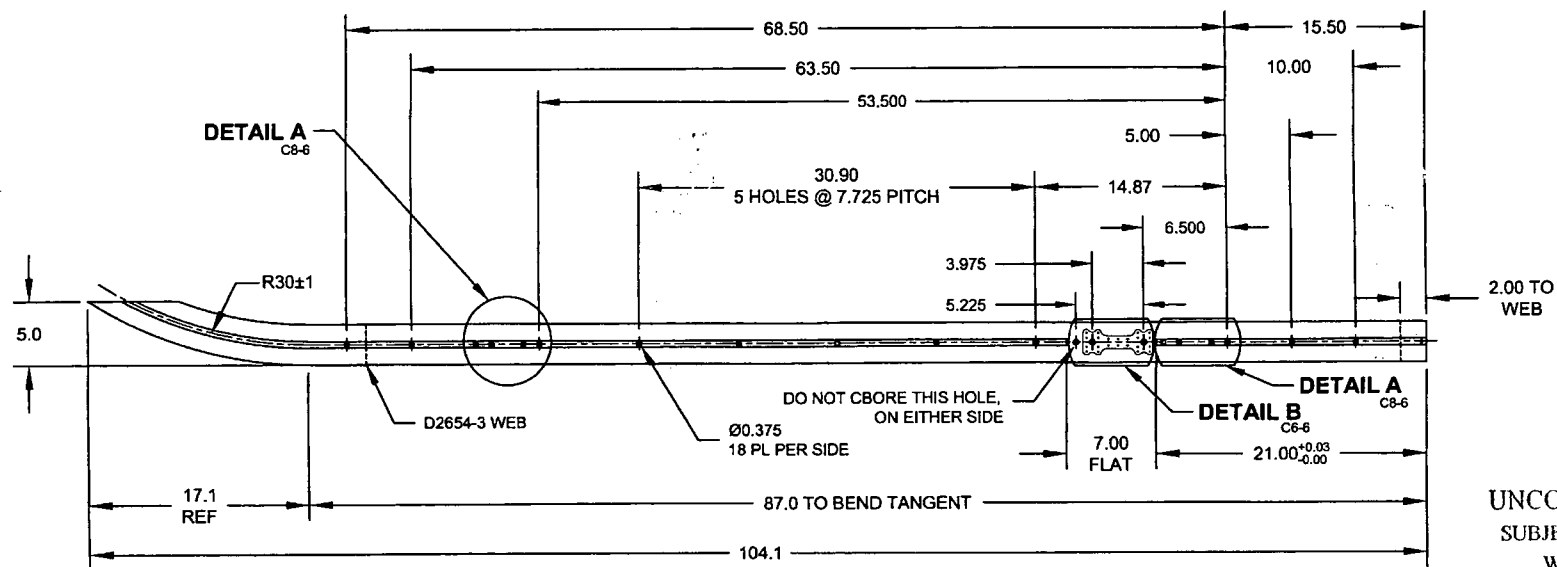

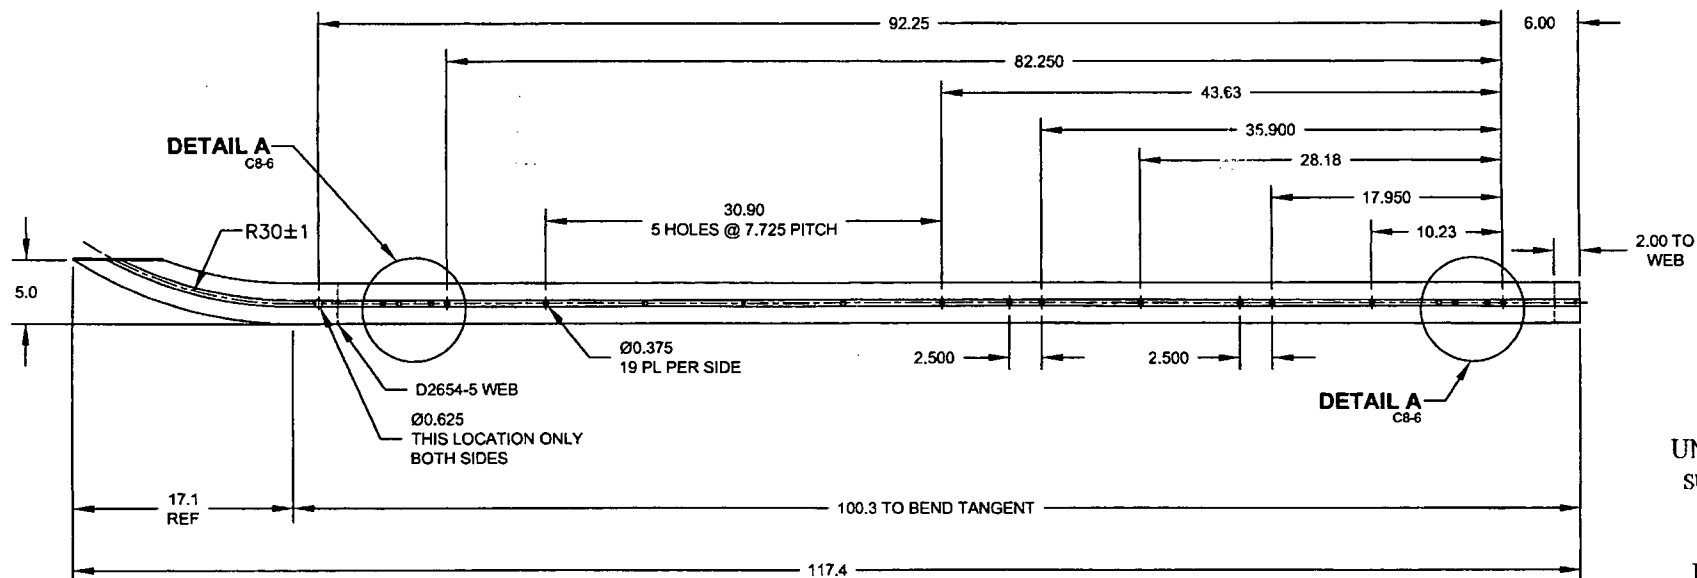


D2650-5 BENDING/DRILLING DETAIL

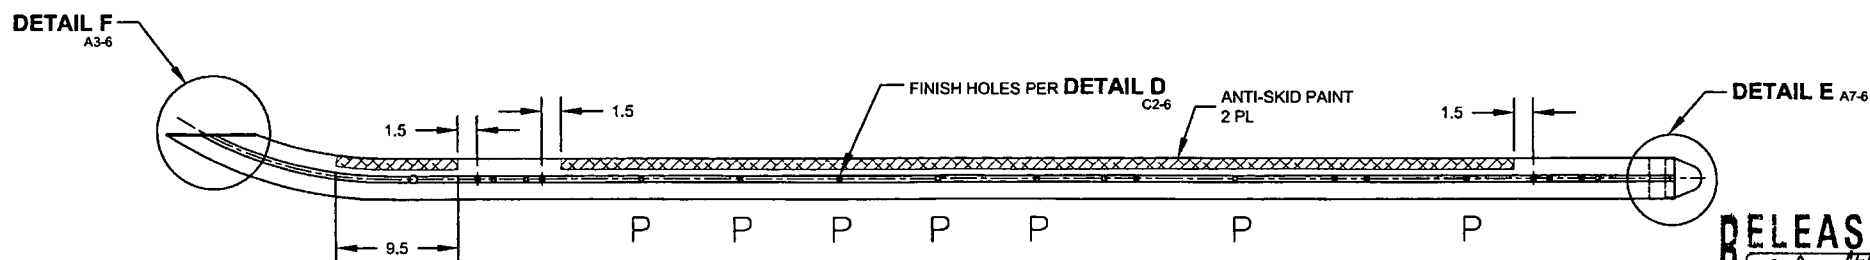

D2650-5 ASSEMBLY/FINISHING DETAIL


DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED	<i>[Signature]</i>	DRAWING NO.	REV. F
MFG. APPR.	<i>[Signature]</i>	D2650	SHEET 4 OF 6
APPROVED	<i>[Signature]</i>	TITLE	SCALE
DE APPR.	<i>[Signature]</i>	206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1997 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL, AND IS BUILT UPON THE EXPRESS CONCEPTION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR CORP'D OR COMMUNICATED TO ANY OTHER PERSON WITHOUT THE WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

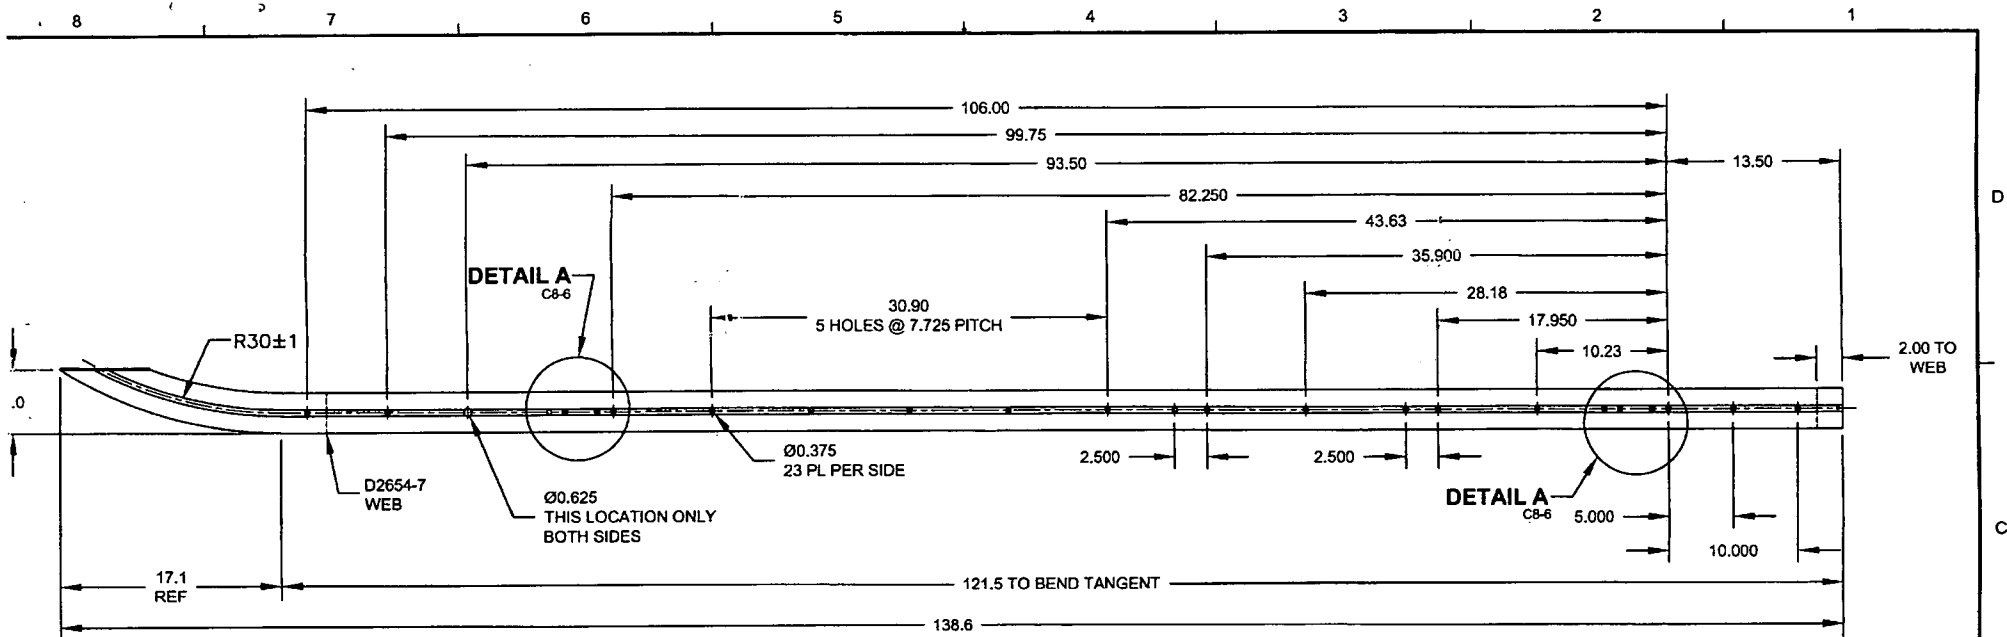

D2650-7 BENDING/DRILL DETAIL


SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENT
WITHOUT NOTICE
WORK ORDER
NO. 53292

RELEASED
08-07-22

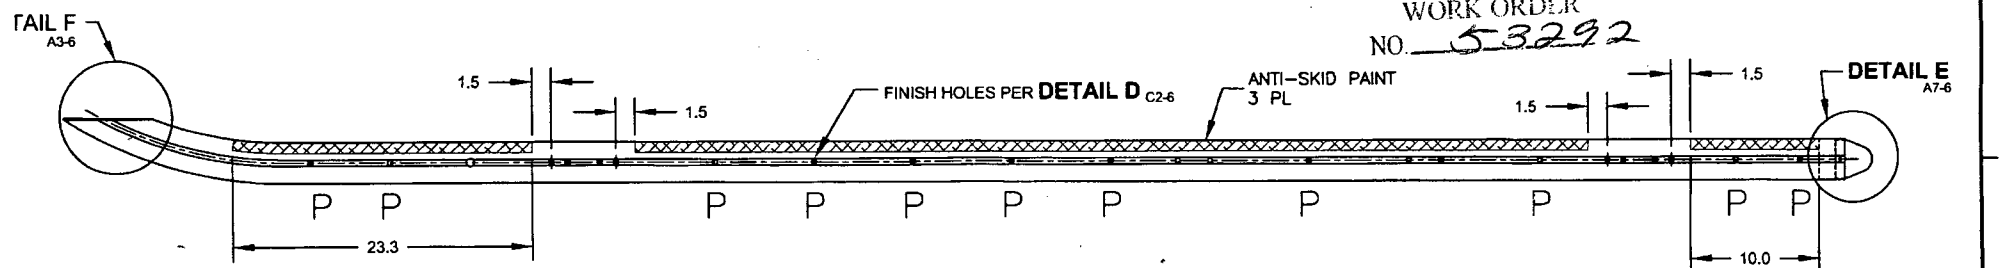


D2650-7 ASSEMBLY/FINISHING DETAIL

DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 5 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	<small>COPYRIGHT © 1997 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.</small>	

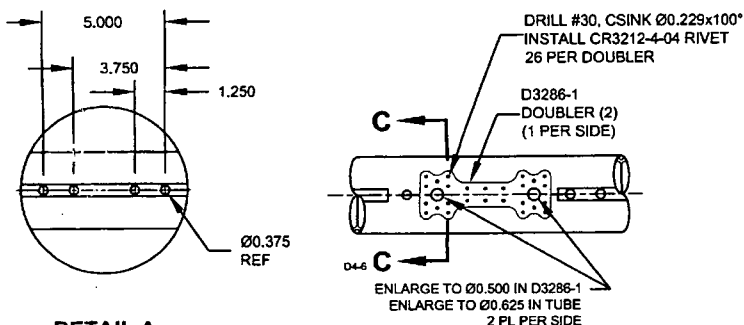


DETAIL A
SCALE 2X
C2-2
D7-2
C2-3
D7-3
C2-4
D7-4
C2-6
D6-5

DETAIL B
SCALE 2X
C3-2
C3-3

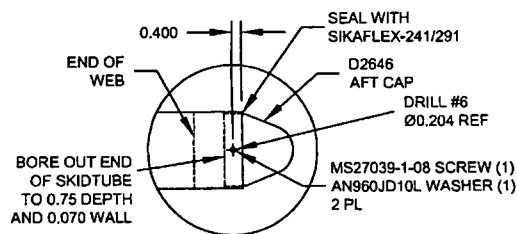


DETAIL E
SCALE 2X
B2-2
B2-3
B1-4
B1-5

SECTION C-C C7-6
SCALE NONE

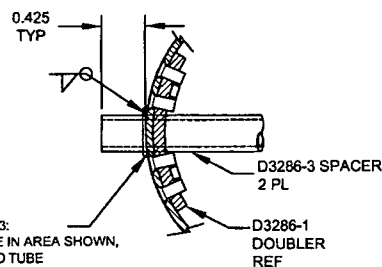


- TO INSTALL D3286-1/3:
1. GRIND OFF FLANGE IN AREA SHOWN, FLUSH WITH ROUND TUBE
 2. LOCATE & DRILL D3286-1 DOUBLER USING DT3286-1T1
 3. ENLARGE HOLES IN D3286-1 TO Ø0.500
 4. ENLARGE HOLES IN TUBE TO Ø0.625 AND CHAMFER HOLE 0.030x45°
 5. RIVET D3286-1 TO TUBE
 6. INSERT D3286-3 SPACER
 7. WELD IN PLACE.

F

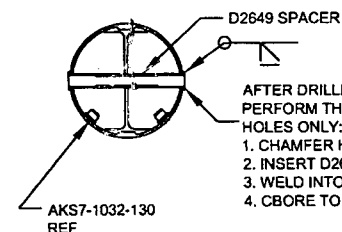

DETAIL D
FOR Ø0.375 HOLES ONLY
SCALE 3X
B4-2
B4-3
B4-4
B4-5

- AFTER DRILLING AND BENDING ASSEMBLY PERFORM THE FOLLOWING FOR Ø0.375 HOLES ONLY:
1. CHAMFER HOLE 0.030 X 45°
 2. INSERT D2649 SPACER
 3. WELD INTO PLACE AND GRIND FLUSH
 4. CBORE TO Ø0.313 X 0.75 DP

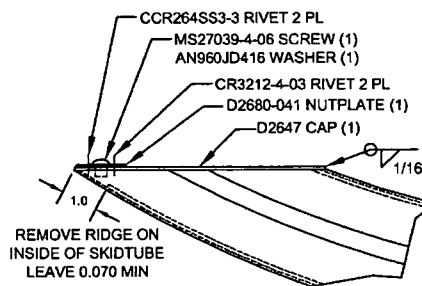





DETAIL F
SCALE NONE
B6-2
B8-3
B8-4
B8-5

DETAIL F NOTES:

1. CUT TUBE LEVEL
2. REMOVE RIDGE ON FWD SIDE
3. LOCATE D2647 (TRIM AS NECESSARY)
4. WELD D2647 IN PLACE PER DART QSI 004
5. GRIND FLUSH
6. RIVET D2680-041 NUT PLATE IN PLACE

NOTE: MASK THREADS IN D2680-041 PRIOR TO FINISH

RELEASED
05-09-22/19

DESIGN	DS	DART AEROSPACE USA, INC	
DRAWN	AJS	PORT HADLOCK, WA	
CHECKED		DRAWING NO.	REV. F
MFG. APPR.		D2650	SHEET 6 OF 6
APPROVED		TITLE	SCALE
DE APPR.		206/407 SKIDTUBE ASSEMBLIES	NTS
DATE	08.08.08	COPYRIGHT © 1987 BY DART AEROSPACE USA, INC THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE USA, INC.	

SHOP COPY
RETURN TO
ENGINEERING
UNCONTROLLED COPY
SUBJECT TO AMENDMENTS
WITHOUT NOTICE
WORK ORDER
NO. 53292

NO. 214

AWS D17.1.2001
QUALIFICATION TEST RECORD

Name: Barclay Elliott
Job number: 52855
Part number: D206-HA-251
Description: 206 skid tube
Welding Process: Tig[☒] Mig[]
Base material: Aluminium
Current: AC[☒] DC[]

TEST REQUIREMENTS AND RESULTS

Visual: pass[☒] fail[]
Penetration: pass[☒] fail[]

UNACCEPTABLE

Cracks: pass[☒] fail[]
Undercut: pass[☒] fail[]
Pin holes: pass[☒] fail[]
Overlap (cold lap): pass[☒] fail[]
Porosity (surface): pass[☒] fail[]
Coloration: pass[☒] fail[]

Qualifier Pat. Dunc. Date of Test Coupon 09.10.29
Welder Barclay Elliott Date of Test Coupon 09.10.29

The above named individual is qualified in accordance with AWS D17.1.2001 to weld